AESCULAP® STERILE CONTAINER FUNCTIONAL TEST

BASIS STERILE CONTAINER

B|BRAUN
SHARING EXPERTISE

Check all components of the sterile container visually for damage and correct function before every use. To ensure correct use, instructions for use TA015110-EN must be followed under all circumstances. If the most recent edition of the instructions for use is not available to you, please contact B. Braun Medical Ltd.

1. METAL PARTS NOT DEFORMED

- Check container bottom and lid

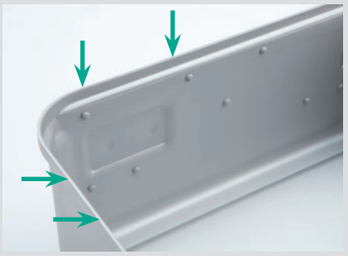

- No dents in rim of the container bottom

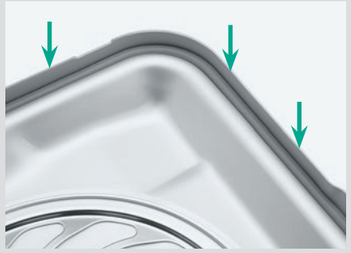

- No dents in rim of the container lid
- Aluminium lid not warped

2. CHECK FILTER RETAINERS

- Filter retainers must be prestressed and have full surface contact at the edge.

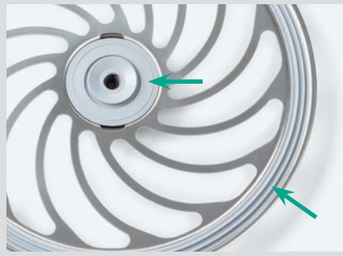

- Gasket is present and intact

- Locating pin for filter retention plate in lid and bottom must not be loose

3. INTACTNESS OF GASKETS

- Gaskets are present and intact
- No cracks, fractures etc.

4. FILTER INSPECTION

- Filters undamaged (no kinks, holes, racks or crevices)
- Single-use filter replaced (intact)

- Filter retainer snaps audibly into position

5. LOCKING MECHANISM FULLY FUNCTIONAL

- The locking mechanism must be fully functional and show no damage
- Lubricate the locking mechanism hinges with Sterilit® I (JG600) from time to time

6. CORRECT CLOSURE OF LID

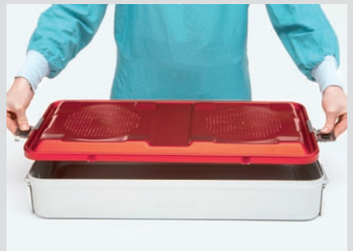

- Adjust container bottom and lid without pressure

7. CARRYING HANDLES UNDAMAGED

- Locking mechanism of lid snaps audibly into place on the bottom counterpart

- Carrying handles are intact and show no visible damage

8. UNDAMAGED STERILE CONTAINERS

- Only use undamaged sterile containers
- If components are damaged, replace with original spare parts or repair immediately (Aesculap Technical Service)

9. LABELLING AND SEALING

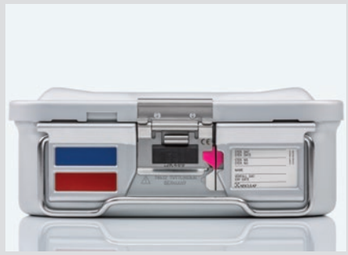

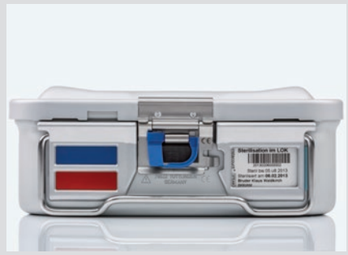

- Sterile container closed
- Either sealed with production label, or production label and plastic lock attached

XX-CIFUS-06-17

B. Braun Medical Ltd | Aesculap | Thorncliffe Park | Sheffield | S35 2PW
Tel: 0114 225 9000 | Fax: 0114 225 9111 | www.bbraun.co.uk

AESCULAP® STERILE CONTAINER FUNCTIONAL TEST

PRIME*Line*® PRO STERILE CONTAINER

B|BRAUN
SHARING EXPERTISE

Check all components of the sterile container visually for damage and correct function before every use. To ensure correct use, instructions for use TA015110-EN must be followed under all circumstances. If the most recent edition of the instructions for use is not available to you, please contact B. Braun Medical Ltd.

1. METAL PARTS NOT DEFORMED

- Check container bottom and lid

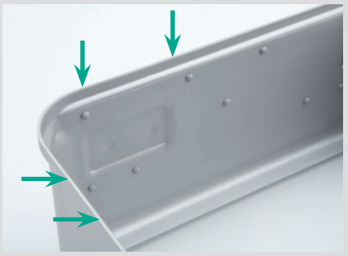

- No dents in rim of the container bottom

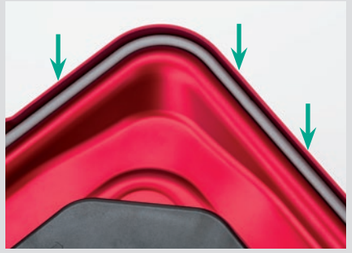

- No dents in rim of the container lid
- Aluminium lid not warped

2. INTACTNESS OF GASKETS

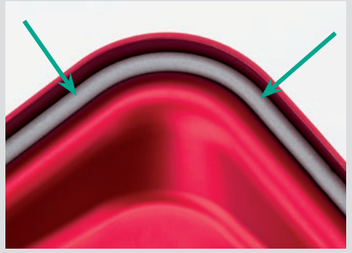

- Gaskets are present and intact
- No cracks, fractures etc.

3. FILTER INSPECTION

- Remove cover for inspection (remove anticlockwise, replace clockwise)

- Primeline filters undamaged (no kinks, holes, cracks or crevices)
- Leave filter in cartridge during inspection

4. LOCKING MECHANISM FULLY FUNCTIONAL

- Ensure that the triangles are alined together (locked position)

- The locking mechanism must be fully functional and show no damage
- Lubricate the locking mechanism hinges with Sterilit® I (JG600) from time to time

5. CORRECT CLOSURE OF LID

- Adjust container bottom and lid without pressure

- Locking mechanism of lid snaps audibly into place on the bottom counterpart

6. CARRYING HANDLES UNDAMAGED

- Carrying handles are intact and show no visible damage

7. UNDAMAGED STERILE CONTAINERS

- Only use undamaged sterile containers
- If components are damaged, replace with original spare parts or repair immediately (Aesculap Technical Service)

8. LABELLING AND SEALING

- Sterile container closed
- Either sealed with production label, or production label and plastic lock attached

XX-CIFUPP-06-17

B. Braun Medical Ltd | Aesculap | Thorncliffe Park | Sheffield | S35 2PW
Tel: 0114 225 9000 | Fax: 0114 225 9111 | www.bbraun.co.uk